



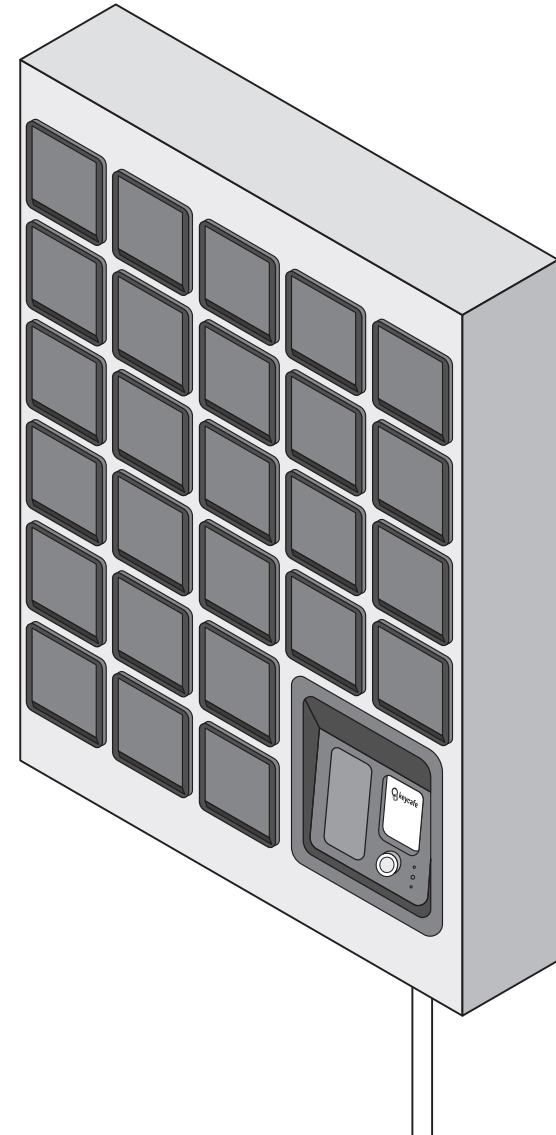


Maison Series



docs.keycafe.com/docs/installation



ENGLISH
FRANÇAIS
ESPAÑOL
ITALIANO
日本語
中文(繁體)



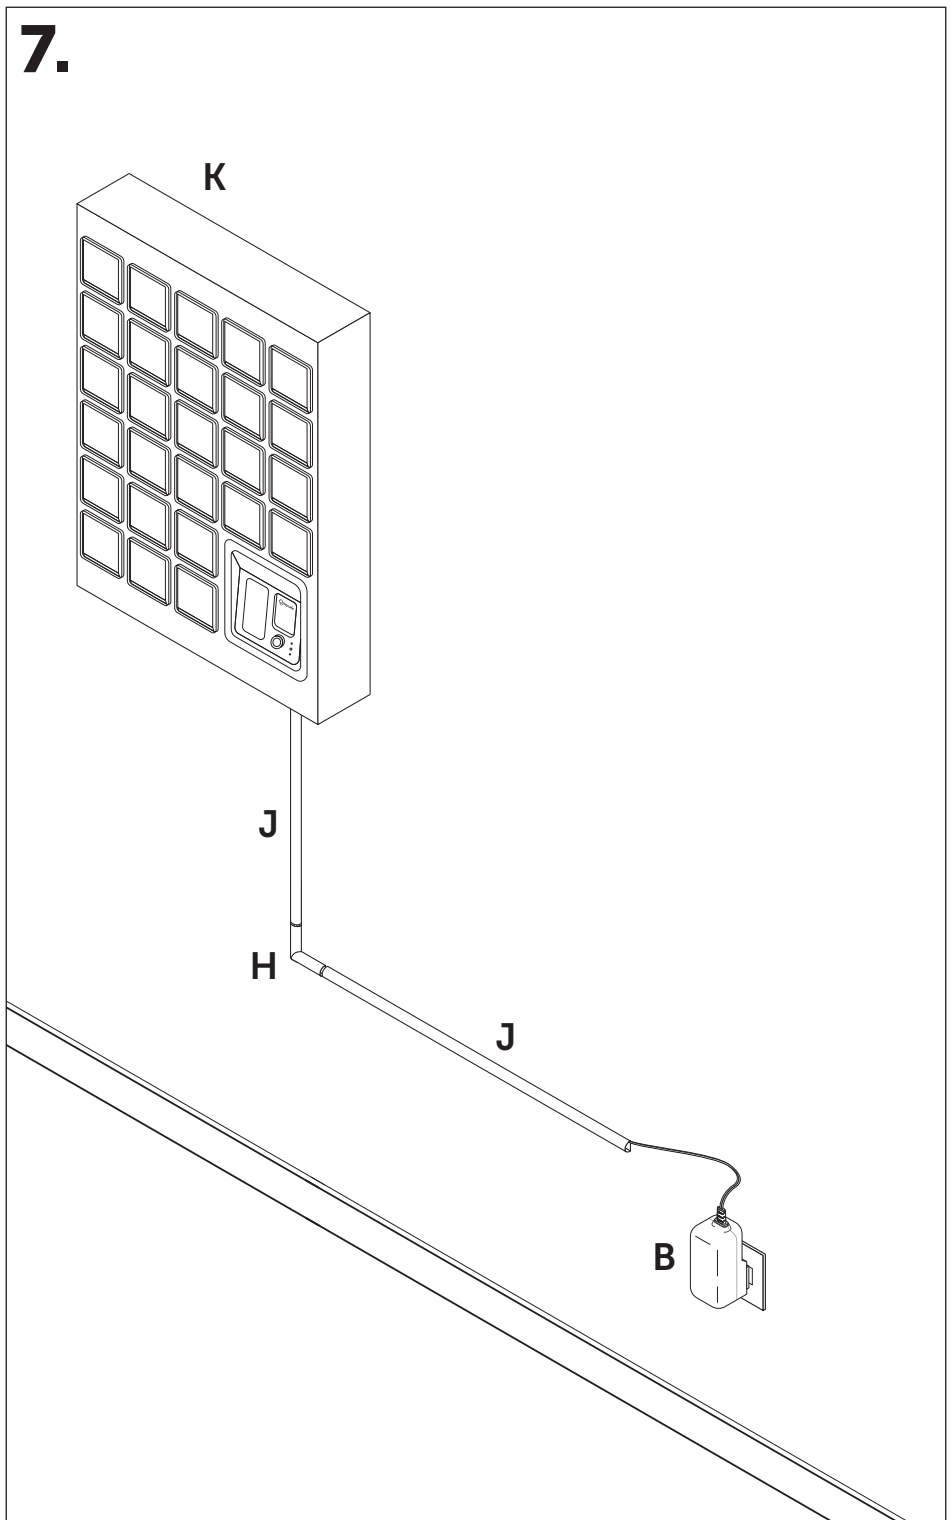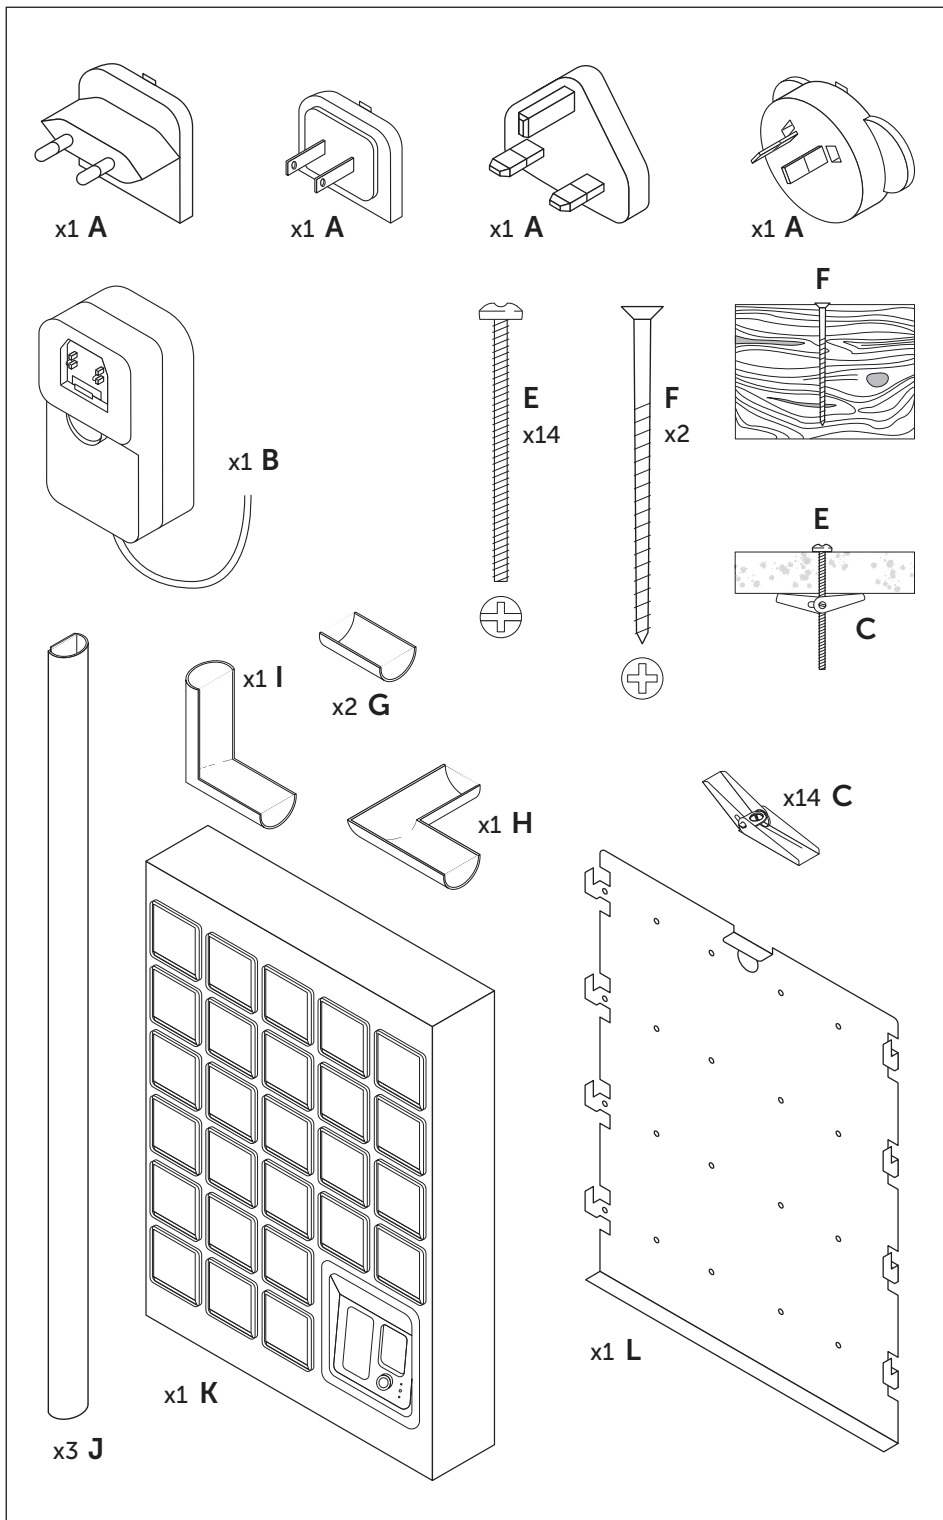


6.

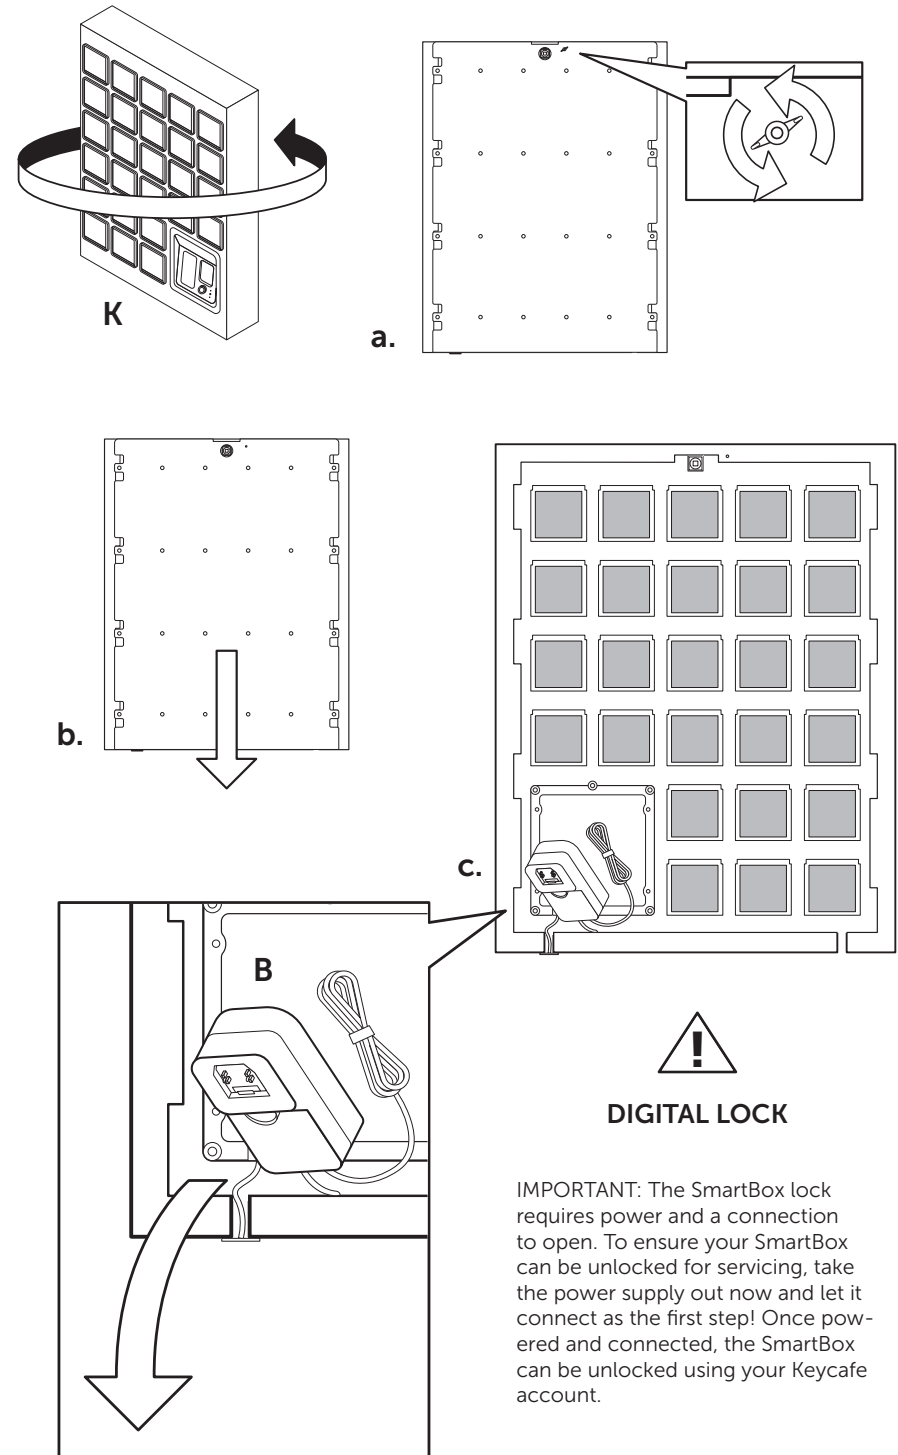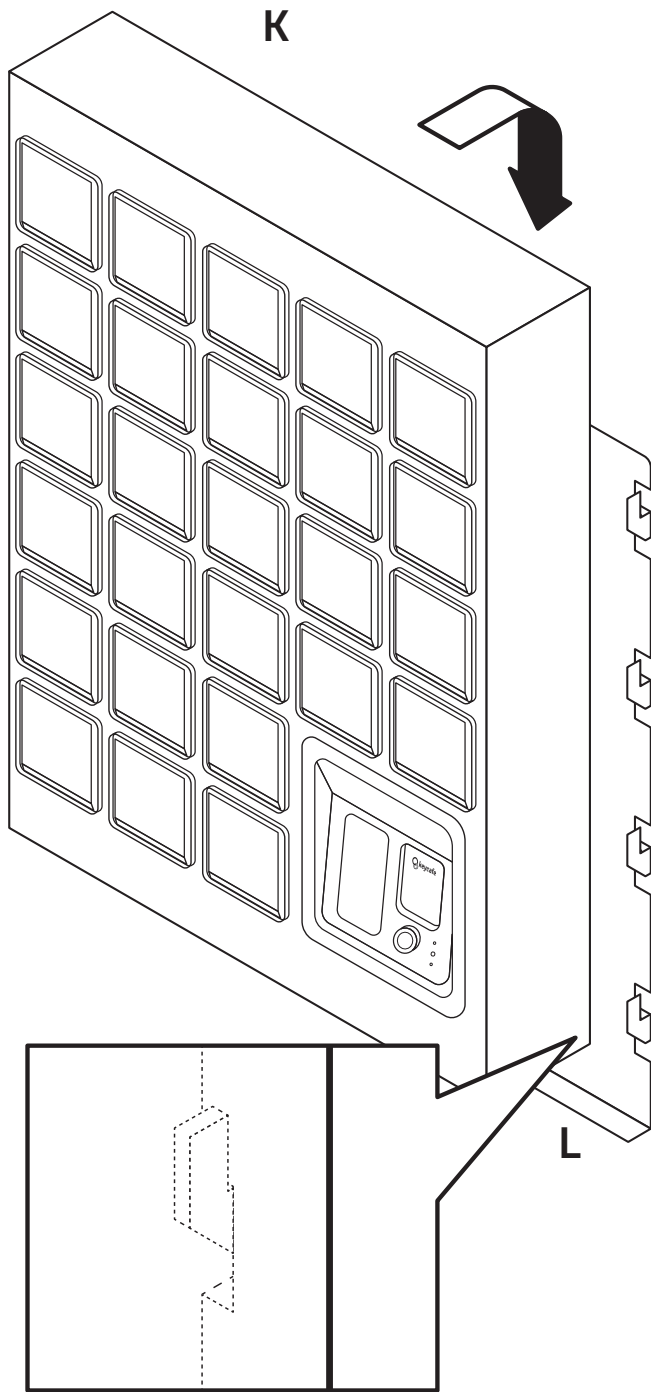

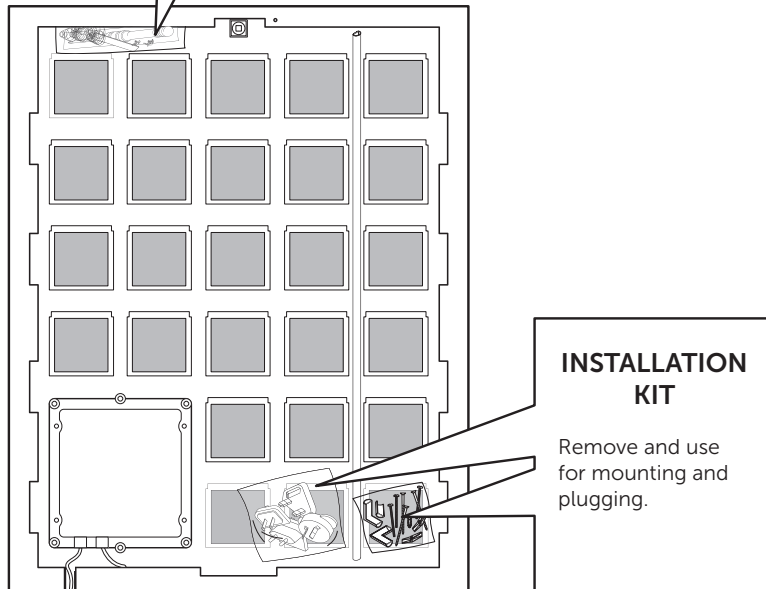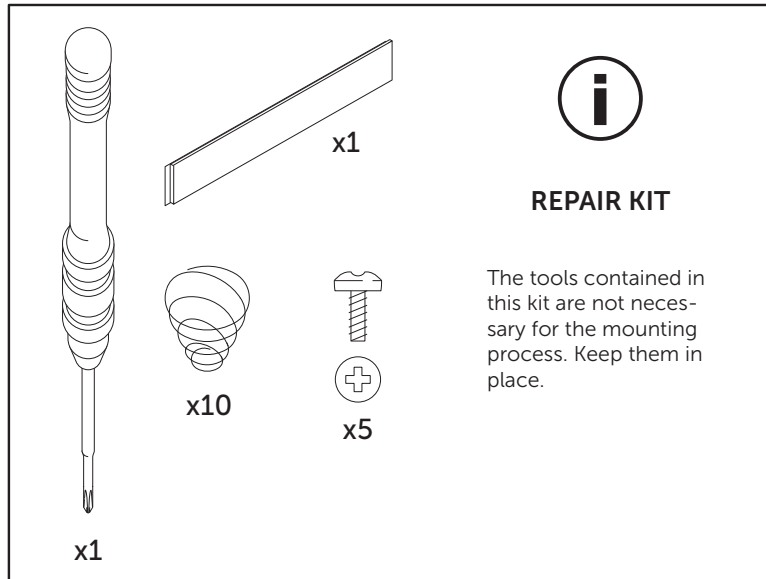

5.

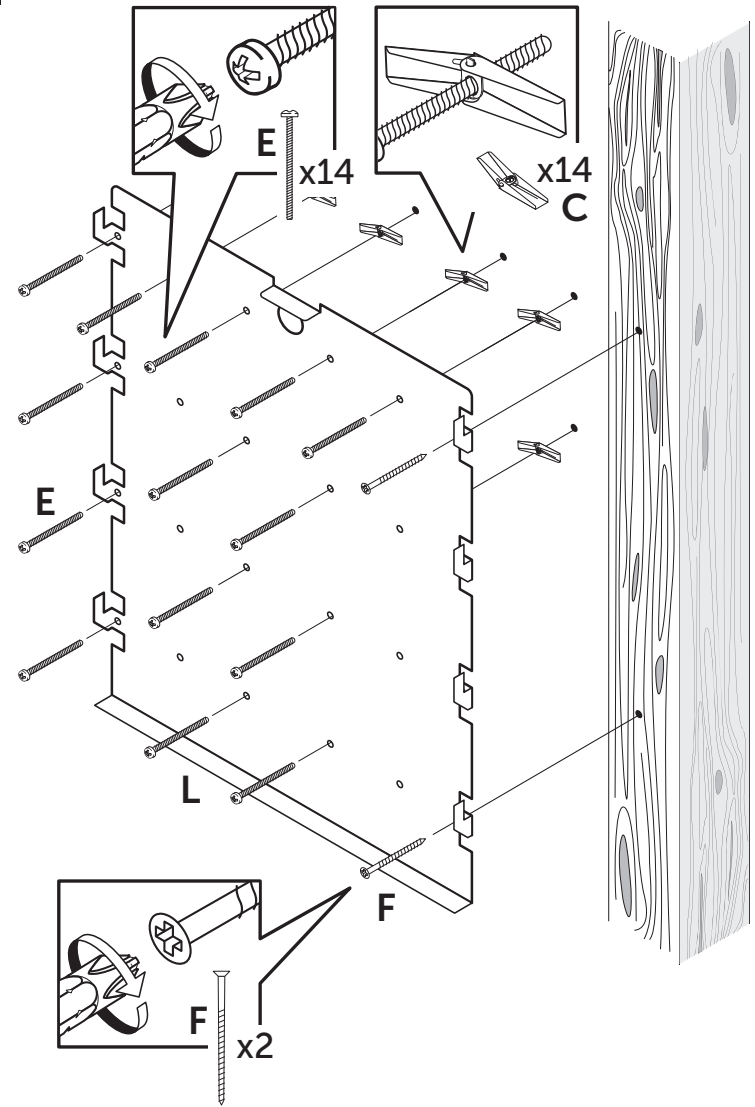


To maximize the effectiveness of the locking system, be sure to install screws on bottom row and edges of the backplate.




Important: Line up one row of holes along a stud in the wall and use the F screw.


4.

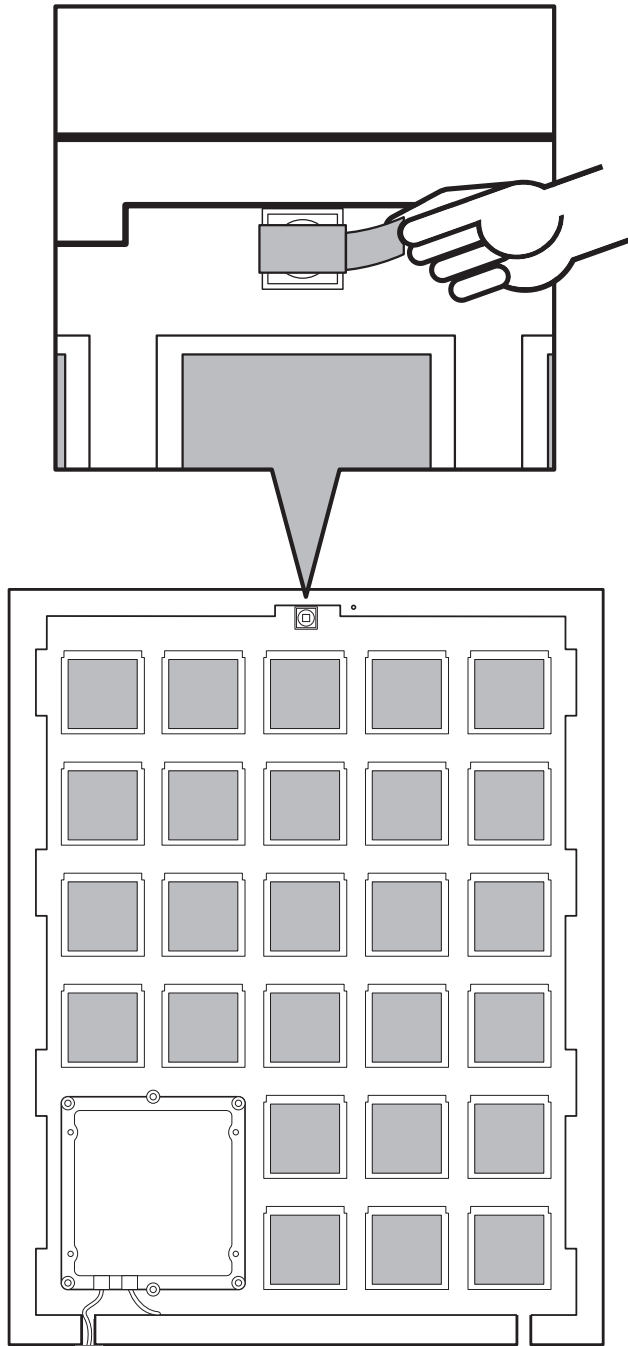


1.





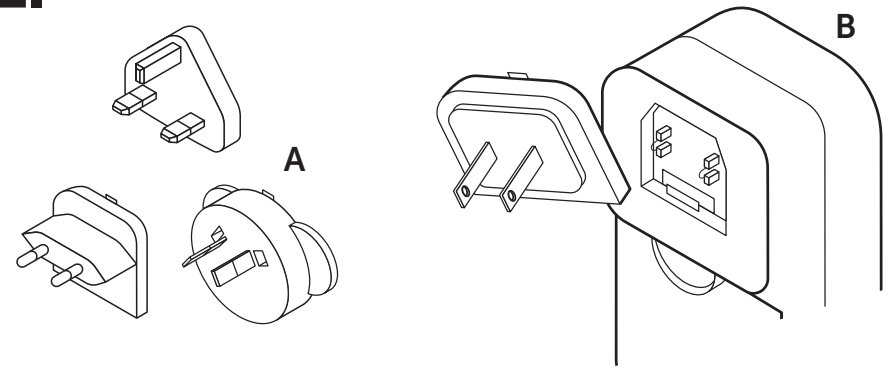




2.

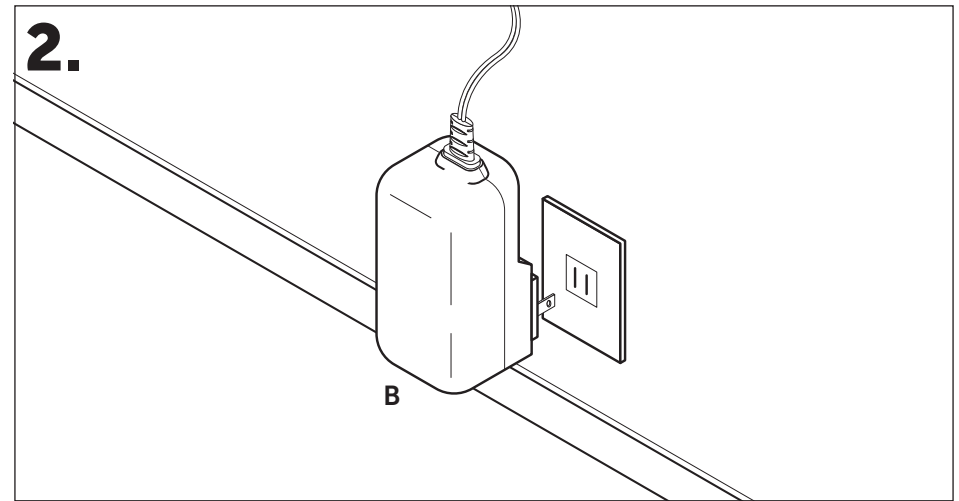


3.

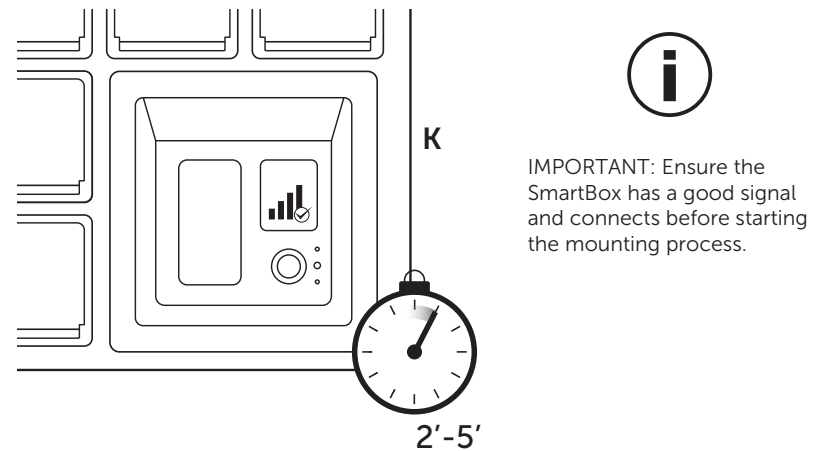

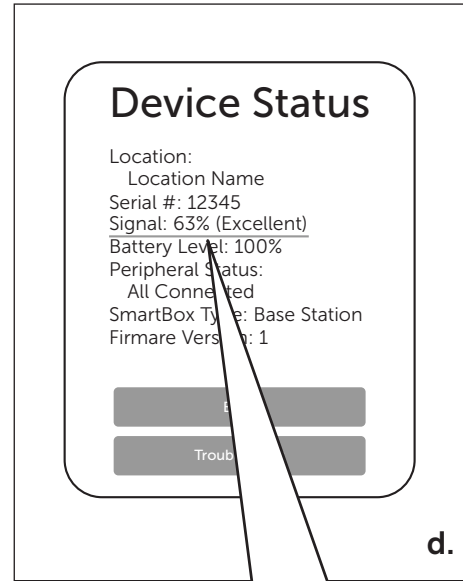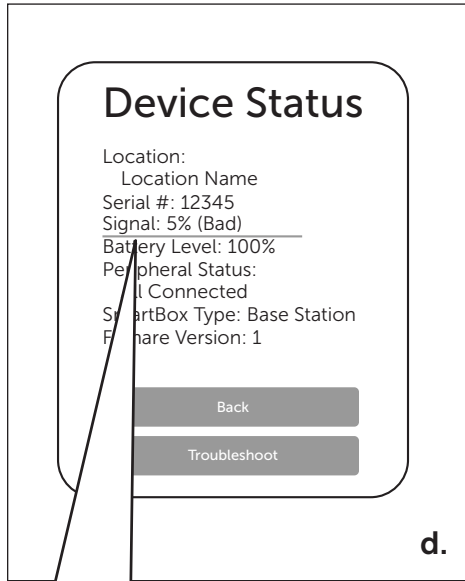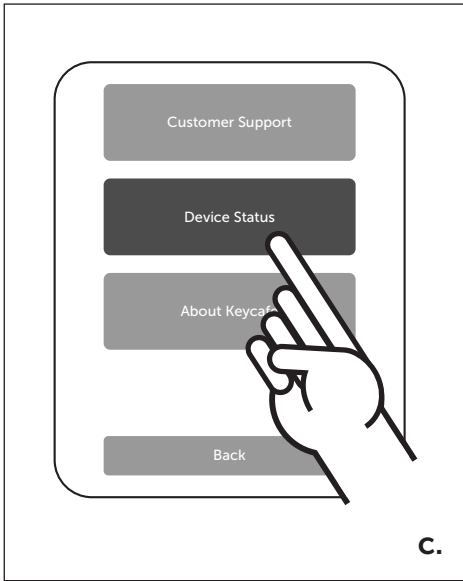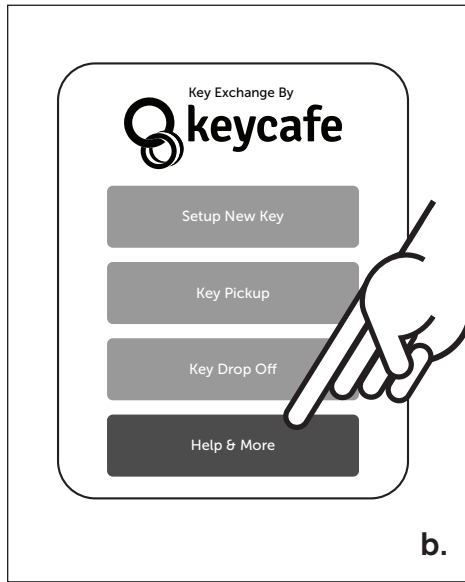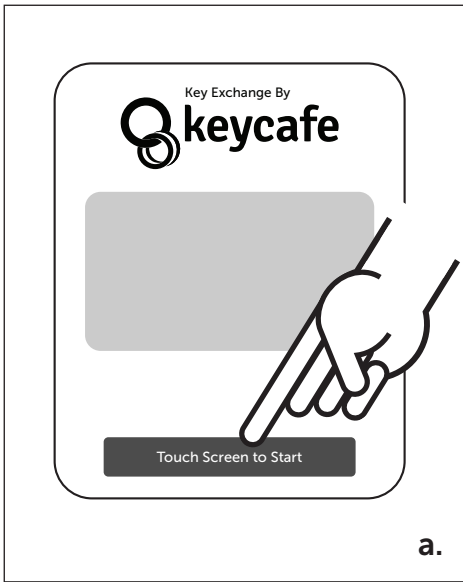




 < 10% 

 **DO NOT INSTALL**

www.keycafe.com/help

 > 10% 

 **GO TO NEXT STEP**